



①

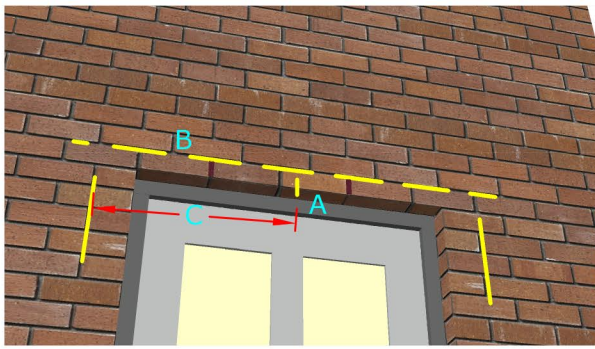


- A** Mark centre-line above doorway.
- B** Mark spirit level lines for canopy/top of brackets (horizontal)
- C** Mark centre for each bracket/holes (vertical)
Measure to centre of the holes provided in the glass

②

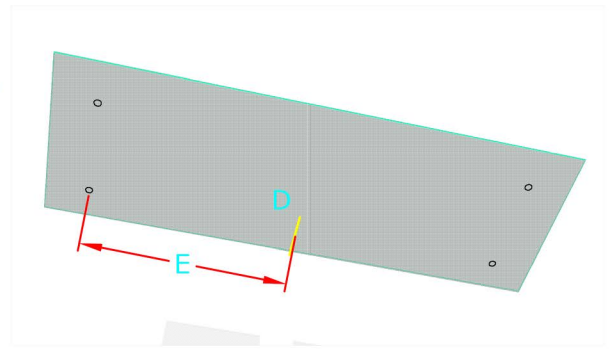


- D** Mark centre-line onto the Glass.
- E** Double check measurement to hole centres are equal with markings made each side of the doorway.

③

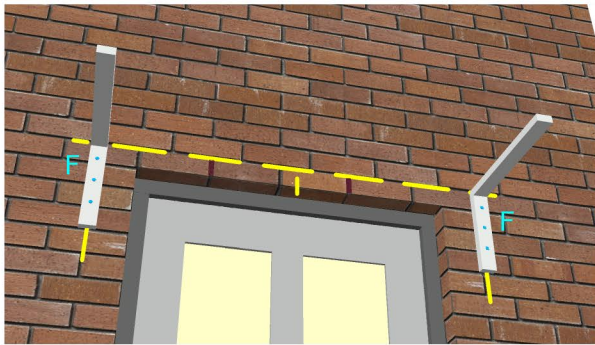

- F** Offer Bracket to correct position and mark on the wall through all pre-drilled holes (provided)
- G** With bracket removed drill brickwork with 8mm Masonry bit. Fix brackets using 10x100mm Ext Anchor Bolts (every hole)

④

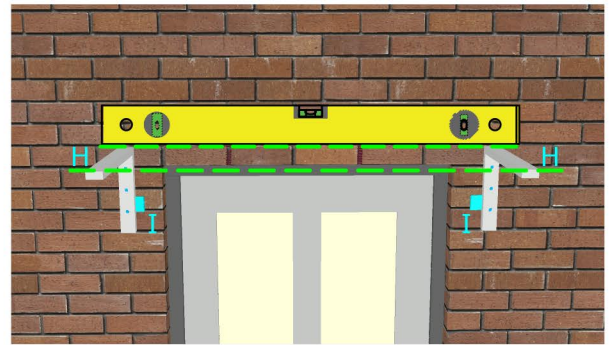


- H** Check brackets are plumb and level with one another (front and back)
Note: Brackets are designed to have fall to the front.
- I** Before fixing tight, suitable packers may be necessary between bracket and wall. Tighten/slacken fixing if necessary using socket set.

⑤



- J** Remove pre-assembled fixings from the brackets. Sit glass onto the brackets.
Take a photo / note fixing assembly to help with re-assembly.

⑥

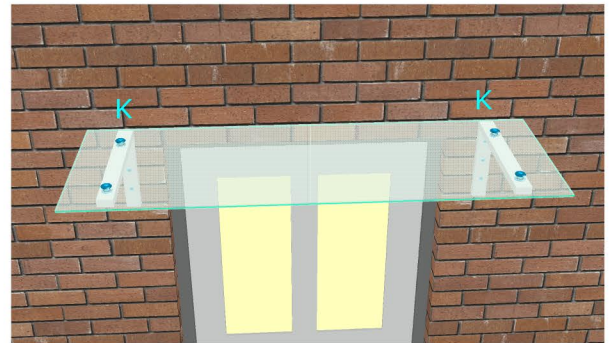

- K** Marry all holes in the glass with holes in the brackets. *If any holes don't align, you may need to loosen the odd fixing in the bracket/wall and pack where required and tighten back up.*

⑦

- L** Once all holes line through, re-assemble the fixings between the glass and brackets.

Do not over tighten these fixings to ensure the glass is not damaged in the process.



the
canopyshop

The Linear Canopy
Fitting Instructions