



①

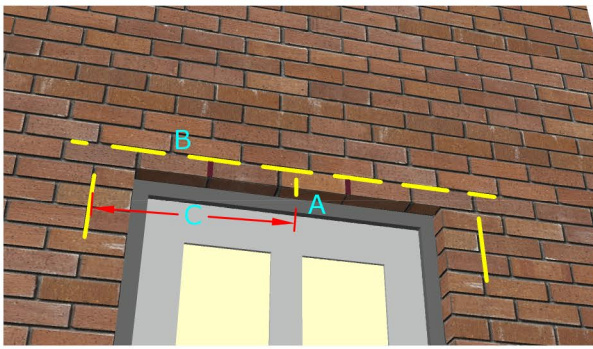


- A** Mark centre-line above doorway.
- B** Mark spirit level lines for canopy/top of brackets (horizontal)
- C** Mark centre for each bracket/holes (vertical)  
*Measure to centre of the holes provided in the glass*

②

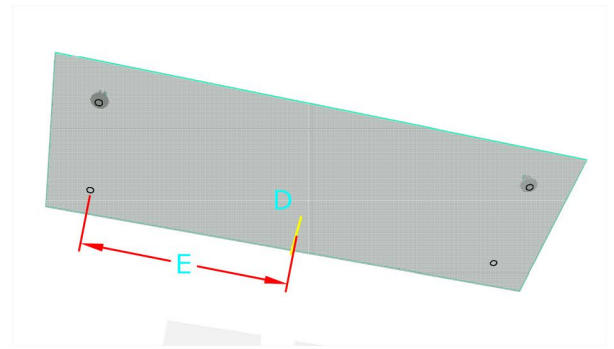


- D** Mark centre-line onto the Glass.
- E** Double check measurement to hole centres are equal with markings made each side of the doorway.

③

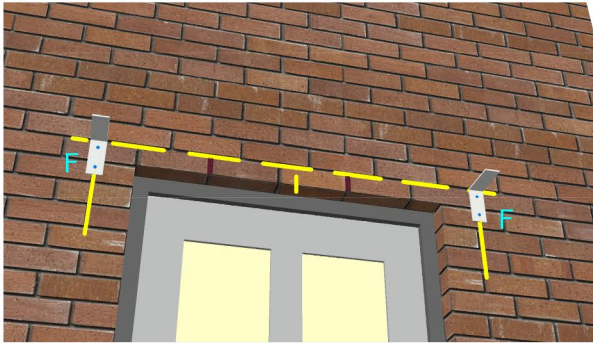

- F** Offer Bracket to correct position and mark on the wall through all pre-drilled holes (provided)
- G** With bracket removed drill brickwork with 8mm Masonry bit. Fix brackets using 10x100mm Ext Anchor Bolts (every hole)

④

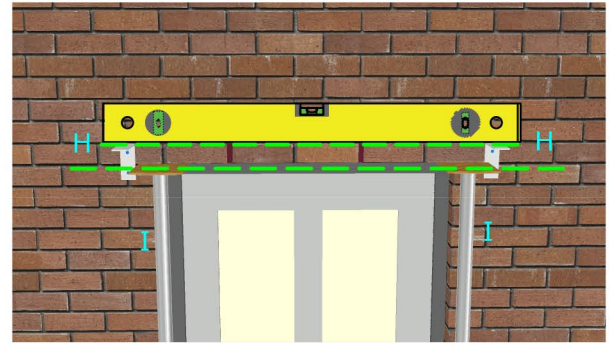


- H** Check brackets are plumb and level with one another  
*Note: Brackets are angled to have fall to the front.*
- I** You may need to loosen the odd fixing in the bracket/wall, pack if required & tighten back up.

⑤



- J** Remove pre-assembled fixings from the brackets. Sit glass onto the brackets and re-assemble the fixings through glass and both brackets.  
*This can only be done while the front of the glass is supported, not obstructing any holes, by additional operatives &/or a pair of stable Props/supports.*

⑥

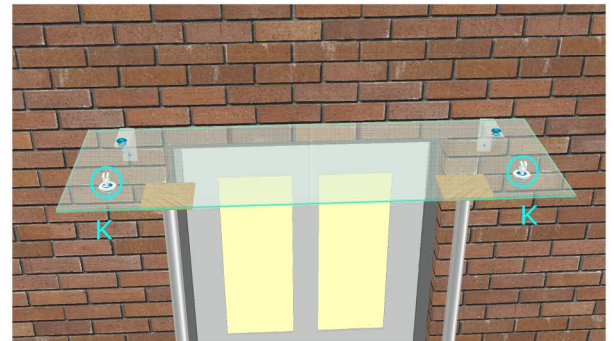

- K** Assemble Tie Bar eye at the front of Glass.  
**Do not over tighten the fixings to ensure the glass is not damaged in the process.**

⑦

- L** Tie Bar Wall Plates to be positioned in correct location against wall, drill using 8mm Masonry bit, then fix with 2no 10x100mm Ext grade Anchor Bolts for each wall plate.

**Note: Please check you get a good fix by performing a Pull Test - Failing this, you may be required to source alternative fixings and a chemical resin if necessary.**



the  
**canopyshop**

T: 01536 446393 E: sales@thecanopyshop.co.uk  
6, Canberra House, Corby Gate Business Park, Priors Haw Road,  
Corby, Northamptonshire NN17 5JG

**The Suspended Linear Canopy**  
Fitting Instructions